




# Samsung Galaxy Media Player 5 Earpiece Speaker Replacement

Written By: China Ayala

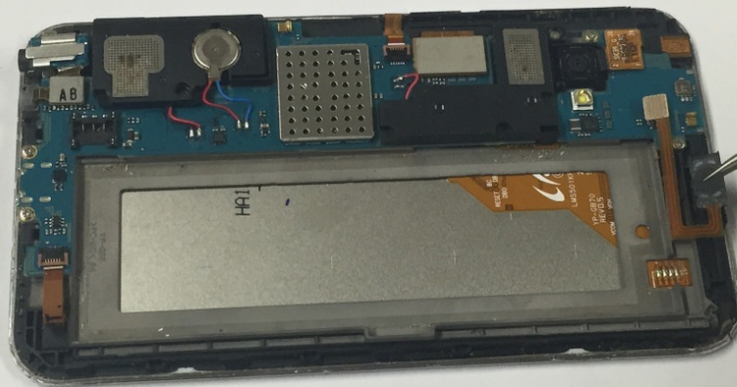

## INTRODUCTION

This guide will show you the steps to removing and replacing the earpiece speaker inside the Samsung Galaxy Media Player 5 device.



### TOOLS:



- [Phillips #0 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [iFixit Opening Picks set of 6](#) (1)



### PARTS:

- [Galaxy Player 5.0 Small Speaker](#) (1)

## Step 1 — Earpiece Speaker

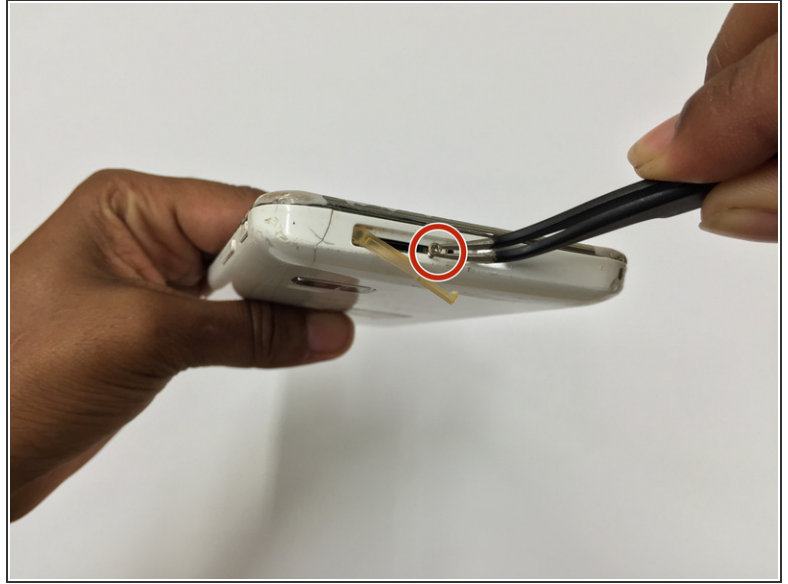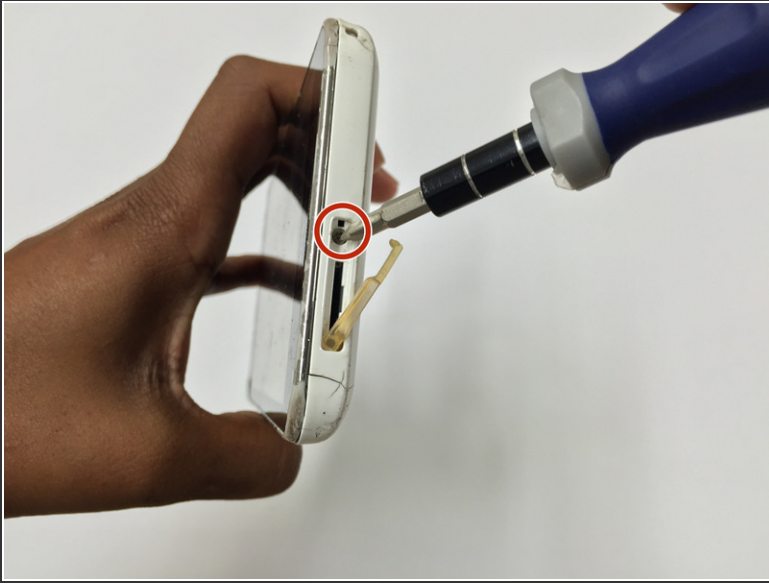


 Remove the SD Memory Card before working on the device.

- Use a Phillips screwdriver to remove the 10 mm screw near the SD Memory Card port.


## Step 2



- White caps cover screws on both sides of the charging port. Use the angled tweezers to remove them.
-  Use a blow dryer on low heat if necessary to loosen the adhesive.




### Step 3

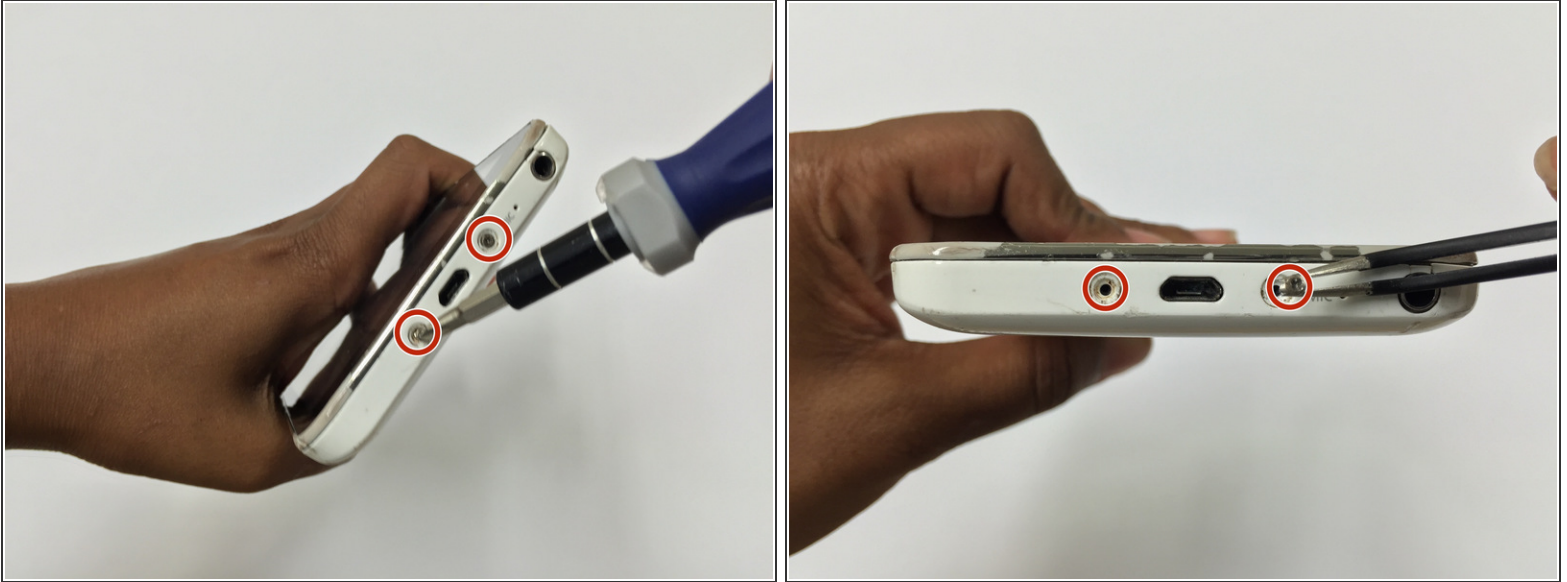



- Using a Phillips head screwdriver, unscrew the two 10 mm screws located on either side of the charging port.

### Step 4

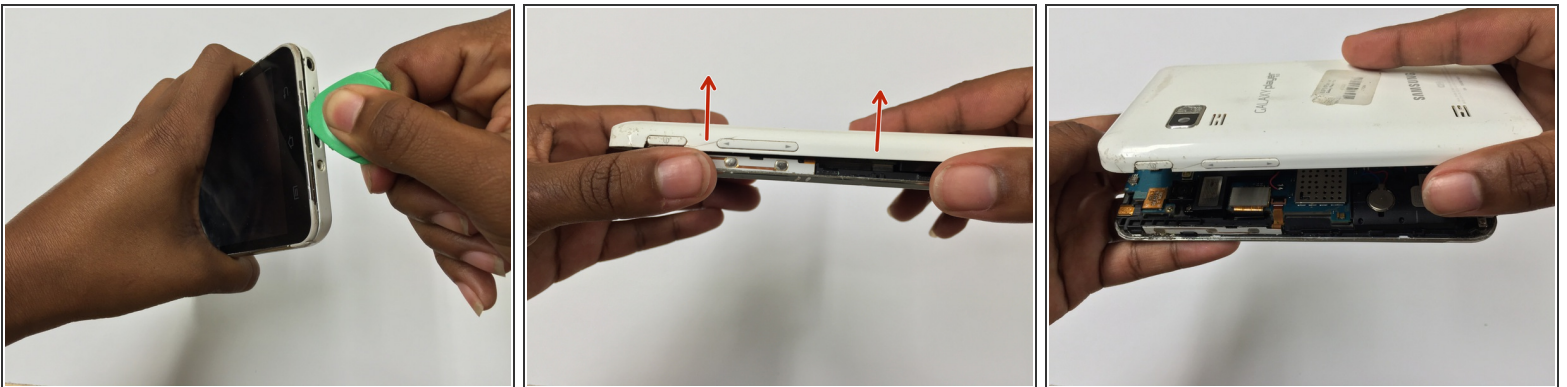



- Using the opening pick, pry at the bottom and work around each edge of the device until the front cover and back cover housing is separated.
- ⓘ You will hear a popping sound to indicate the separation.

## Step 5

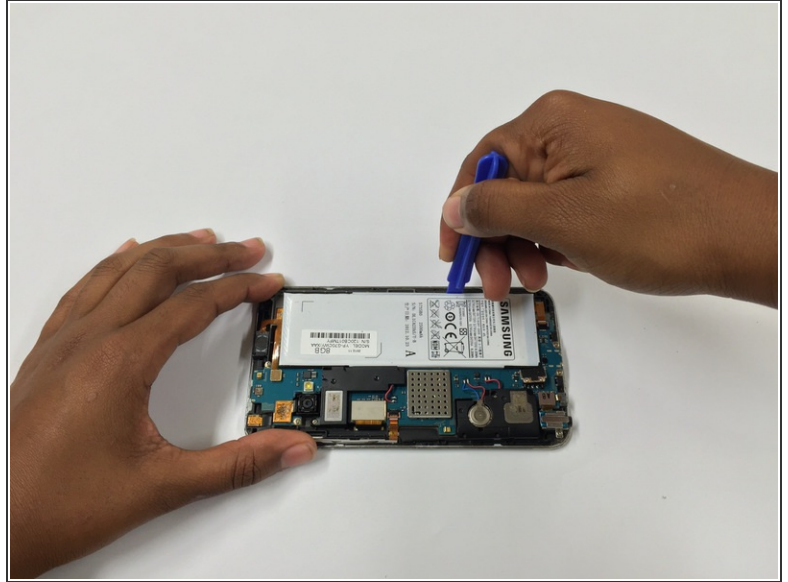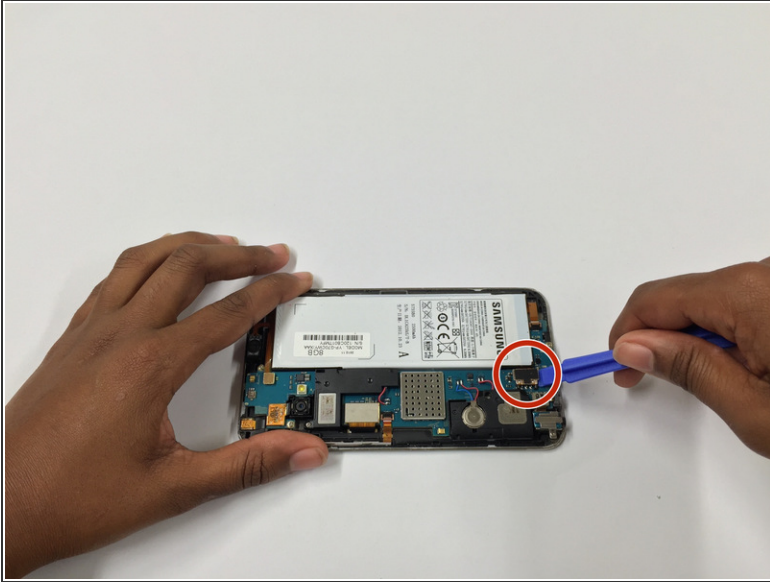

- Using the plastic opening tool, apply an upward force to detach the battery and the tab attached to it.

## Step 6

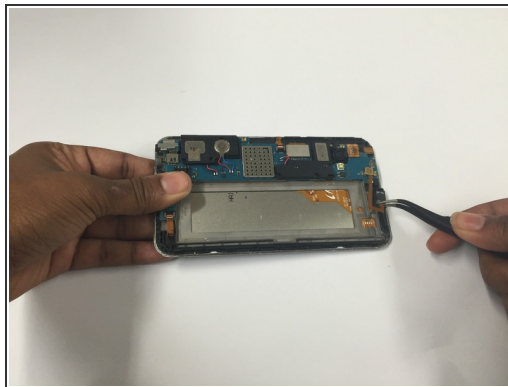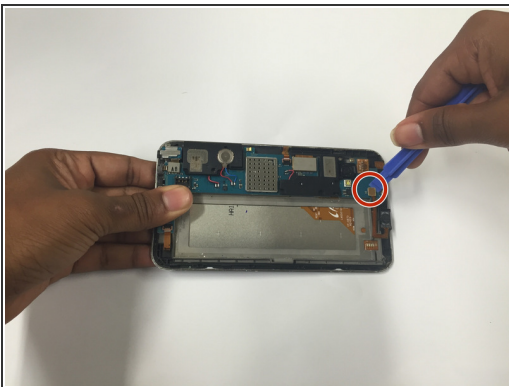

- Using the plastic opening tool, apply an upward force to detach the speaker earpiece.
- Use the tweezers to attach the new earpiece speaker in place of the original.
- ❗ Use a blow dryer, on low heat settings, to loosen the adhesive on the speaker earpiece.

To reassemble your device, follow these instructions in reverse order.

